

## INDEX

- after operation PMCS, 4-34
- attaching tophandler, 5-2, 8-46 and 8-47
- before operation PMCS, 4-30 and 4-31
- before starting procedures, 4-38 and 4-39
- containers
  - lifting, 6-2 and 6-3, 8-48 and 8-49
  - off-loading, 6-5, 8-50 and 8-51
  - stacking, 6-6, 8-50 and 8-51
- DA Form 2404 (completing), 4-28 and 4-29
- DA Form 6125-R, 8-22, 8-26 and 8-27, 8-29
- decision aid matrix, 1-6
- disconnecting tophandler, 5-3, 8-44 and 8-45
- driving procedures, 4-39 and 4-40
- during operation PMCS, 4-31 through 4-33
- HAZCOM tapes, 7-2
- lifting containers, 6-2 and 6-3, 8-48 and 8-49
- matrixes (risk value)
  - equipment, 1-5
  - soldier qualification, 1-3
  - supervision, 1-5
  - terrain, 1-4
  - time of day, 1-6
  - vehicle type, 1-4
  - weather, 1-4
- off-loading containers, 6-5, 8-50 and 8-51
- paper transparencies, A-1 through A-175
- parking procedures, 4-40, 8-52 and 8-53
- performance test
  - driver's (road test), 8-22 through 8-33
  - operating the 50,000-pound RTCH (off road driving), 8-34
- PMCS for 50,000-pound RTCH
  - after operation, 4-34
  - before operation, 4-30 and 4-31
  - during operation, 4-31 through 4-33
- procedures for 50,000-pound RTCH
  - before starting, 4-38 and 4-39
  - driving, 4-39 and 4-40
  - parking, 4-40, 8-52 and 8-53
  - safety, 4-18 through 4-20
  - shutdown, 8-52 and 8-53
  - starting, 4-39
  - stopping engine, 4-40 and 4-41
- Rough Terrain Container Handler, 50,000-pounds
  - after operation checks, 4-34
  - before operation checks, 4-30 and 4-31
  - before starting procedures, 4-38 and 4-39
  - characteristics, 4-3 through 4-6
  - controls and instruments, 4-10 through 4-15

- driving procedures, 4-39 and 4-40, 8-42 and 8-43
- during operation checks, 4-31 through 4-33
- engine starting, 8-39 through 8-41
- hand and arm signals, 4-22
- lubrication, 4-34 and 4-35
- major components, 4-6 through 4-9
- nighttime hand and arm signals, 4-23 and 4-24
- parking procedures, 4-40, 8-52 and 8-53
- safety precaution, 4-21
- safety procedures, 4-18 through 4-20
- shutdown, 8-52 and 8-53
- starting procedures, 4-39
- stopping engine procedures, 4-40 and 4-41
- warning and caution signs, 4-22
- safety procedures, 4-18 through 4-20
- shutdown procedures, 8-52 and 8-53
- stacking containers, 6-6, 8-50 and 8-51
- starting procedures, 4-39
- stopping engine procedures, 4-40 and 4-41
- task numbers
  - 453-118-01, 7-1
  - 551-726-1505 (Preventive Maintenance Checks and Services on the 50,000-pound Rough-Terrain Container Handler), 4-26
  - 551-726-1506 (Perform Starting Procedures On Rough-Terrain Container Handler), 4-1
  - 551-726-1507 (Communicate With Hand and Arm Signals When Operating Rough-Terrain Container Handler), 4-17
  - 551-726-1509 (Attach Container Tophandler to Rough-Terrain Container Handler), 5-1
  - 551-726-1510 (Lift Container Using Rough-Terrain Container Handler), 6-1
  - 551-726-1511 (Drive the Rough-Terrain Container Handler With a Container Attached), 6-1
  - 551-726-1512 (Off-Load A Container With Rough-Terrain Container Handler), 6-4
  - 551-726-1513 (Disconnect Container Tophandler from Rough-Terrain Container Handler), 5-1
  - 551-726-1514 (Perform After-Operation Shutdown Procedures on the 50,000-pound RTCH), 4-37
- tophandler
  - attaching, 5-2, 8-46 and 8-47
  - disconnecting, 5-3, 8-44 and 8-45